

# Troubleshooting

<b>Engine Will Not Start</b> .....	P. 87	<b>Other Warning Indication</b> .....	P. 91
<b>Overheating (High coolant temperature indicator is on)</b> .....	P. 88	Fuel Gauge Failure Indication .....	P. 91
<b>Warning Indicators On or Flashing</b> .....	P. 89	<b>Tire Puncture</b> .....	P. 92
Low Oil Pressure Indicator.....	P. 89	<b>Electrical Trouble</b> .....	P. 99
PGM-FI (Programmed Fuel Injection)		Battery Goes Dead .....	P. 99
Malfunction Indicator Lamp (MIL) .....	P. 89	Burned-out Light Bulb.....	P. 99
ABS (Anti-lock Brake System) Indicator		Blown Fuse .....	P. 104
(CB500XA only) .....	P. 90		