

# Troubleshooting

<b>Engine Will Not Start</b> .....	P. 108	Battery Goes Dead.....	P. 122
<b>Overheating (Segment H flashes in coolant temperature gauge)</b> .....	P. 109	Burned-out Light Bulb .....	P. 122
<b>Warning Indicators On or Flashing</b> .....	P. 110	Blown Fuse.....	P. 125
Low Oil Pressure Indicator .....	P. 110		
PGM-FI (Programmed Fuel Injection)			
Malfunction Indicator Lamp (MIL).....	P. 110		
ABS (Anti-lock Brake System) Indicator .....	P. 111		
<b>Other Warning Indications</b> .....	P. 112		
Fuel Gauge Failure Indication.....	P. 112		
Coolant Temperature Gauge Failure			
Indication .....	P. 113		
<b>Tire Puncture</b> .....	P. 114		
<b>Electrical Trouble</b> .....	P. 122		