

## Instruments (Continued)

### Coolant temperature gauge

When the coolant is over specified temperature, the segment H flashes.

**If the segment H flashes while riding:** → P.106

**If the coolant temperature gauge indicator flashes:** → P.111



### Gear position indicator

The gear position is shown in the gear position indicator.

- ▶ "-" appears when the transmission is not shifted properly.

### Fuel gauge

Remaining fuel when only 1st (E) segment starts flashing: approximately 0.85 US gal (3.2 L)

**If the fuel gauge indicator flashes in a repeat pattern or turns off:** → P.110

