

# Troubleshooting

<b>Engine Will Not Start</b> .....	P. 105
<b>Overheating (Segment H flashes in coolant temperature gauge)</b> .....	P. 106
<b>Warning Indicators On or Flashing</b> .....	P. 107
Low Oil Pressure Indicator .....	P. 107
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL).....	P. 107
ABS (Anti-lock Brake System) Indicator .....	P. 108
Torque Control Indicator.....	P. 109
<b>Other Warning Indications</b> .....	P. 110
Fuel Gauge Failure Indication.....	P. 110
Coolant Temperature Gauge Failure Indication .....	P. 111
<b>Tire Puncture</b> .....	P. 112

<b>Electrical Trouble</b> .....	P. 120
Battery Goes Dead.....	P. 120
Burned-out Light Bulb .....	P. 120
Blown Fuse.....	P. 123