

# Troubleshooting

|   |        |
|---|--------|
| <b>Engine Will Not Start</b> .....  | P. 105 |
| <b>Overheating (Segment H flashes in coolant temperature gauge)</b> ..... | P. 106 |
| <b>Warning Indicators On or Flashing</b> .....                            | P. 107 |
| Low Oil Pressure Indicator .....  | P. 107 |
| PGM-FI (Programmed Fuel Injection)  |        |
| Malfunction Indicator Lamp (MIL).....                                     | P. 107 |
| ABS (Anti-lock Brake System) Indicator .....                              | P. 108 |
| Torque Control Indicator.....   | P. 109 |
| <b>Other Warning Indications</b> .....                                    | P. 110 |
| Fuel Gauge Failure Indication.....  | P. 110 |
| Coolant Temperature Gauge Failure Indication .....                        | P. 111 |
| <b>Tire Puncture</b> .....  | P. 112 |

|                                 |        |
|---------------------------------|--------|
| <b>Electrical Trouble</b> ..... | P. 120 |
| Battery Goes Dead .....         | P. 120 |
| Burned-out Light Bulb .....     | P. 120 |
| Blown Fuse .....                | P. 124 |