

## Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” ► P. 71

### Fuse Box Fuses

1. Remove the front seat. ► P. 81
2. Open the fuse box covers.
3. Pull the fuses out one by one with the fuse puller in the tool kit and check for a blown fuse.  
Always replace a blown fuse with a spare fuse of the same rating.
4. Close the fuse box covers.
5. Reinstall the front seat.

