

## Stopwatch

### To Measure the Time

- 1 Select the stopwatch. **↔P.18**
- 2 To start measurement, press the **SET** button.
  - ▶ The measurement keeps going, if you change an item while measuring.
- 3 To finish measurement, press the **SET** button.
  - ▶ The measurement can also be finished by turning the ignition switch to the **○ (Off)** position.

### To Restart the Measurement

Press the **SET** button again. The stopwatch restarts measurement.

### To Reset the Measured Value

Press and hold the **SEL** button when the stopwatch is displayed and also the measurement is finished.

