

2 Changing of tachometer display

mode:

You can change the display mode of the tachometer.

- 1 Press **SEL** button to switch the display mode of tachometer.
- 2 Press **SET** button. The currently selected display mode is set, and then the display moves to the ordinary display.


Conventional display

Shows the engine RPM on the tachometer bar segment.

Peak hold display

Shows the engine RPM on the tachometer bar segment and peak hold segment. The peak hold segment keeps to show the maximum engine RPM temporarily.

Example: Engine revolutions per minutes
10,500 r/min (rpm)

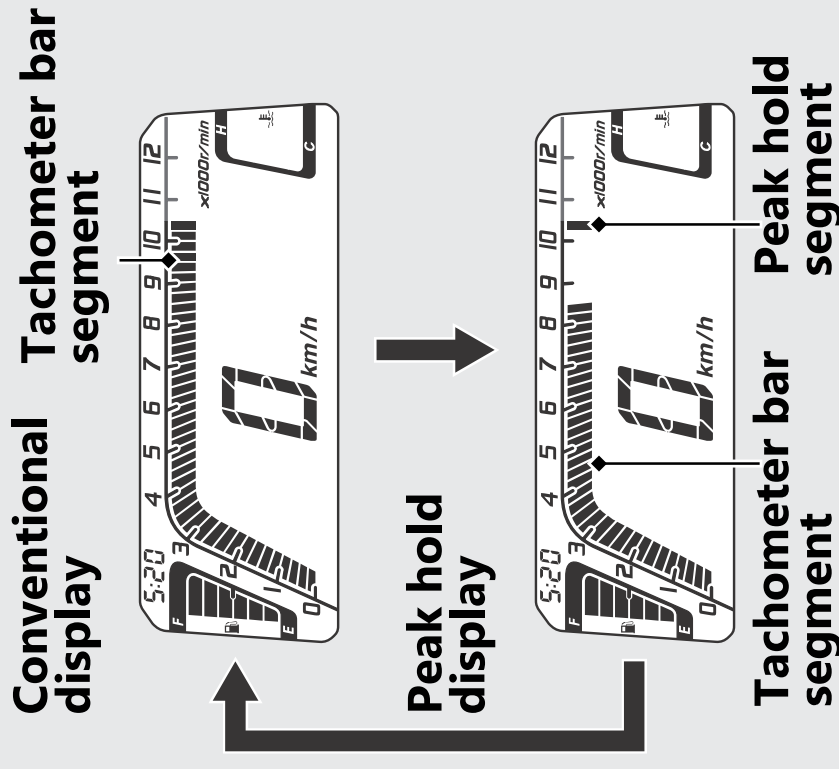

Conventional display

Tachometer bar segment

Tachometer segment

Peak hold display

Tachometer bar segment

Peak hold segment