





REV indicator —

Neutral indicator
 Comes on when the transmission is in Neutral.

 **High beam indicator**
 **Left turn signal indicator**

 **Right turn signal indicator**

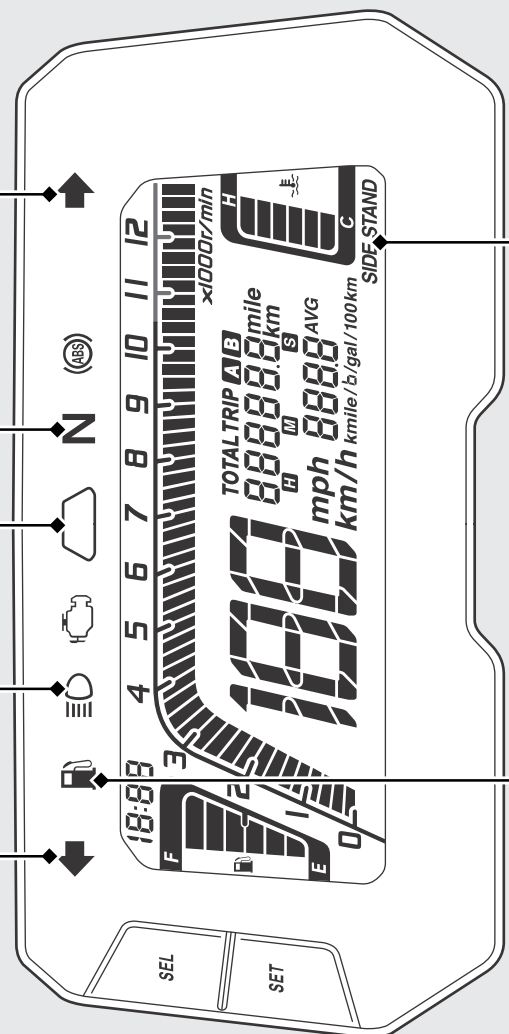

 **Low fuel indicator**
 Comes on when there is only reserve fuel left in the fuel tank. Remaining fuel when low fuel indicator comes on: 1.9 L (0.50 US gal, 0.42 Imp gal)

SIDE STAND indicator
 Comes on when the side stand is lowered.