

Indicators (Continued)

REV Indicator

- Comes on briefly when the ignition switch is turned to the **I** (On) position.

Initial setting

Lighting RPM: 8,000 r/min (rpm)

Interval RPM: 250 r/min (rpm)

REV indicator	r/min (rpm)
Blinking (2 times/second)	7,250 r/min (rpm)
Blinking (5 times/second)	7,500 r/min (rpm)
Blinking (10 times/second)	7,750 r/min (rpm)
Lighting	8,000 r/min (rpm)

► Setting of REV indicator: **↩ P.29**