


# Refuelling

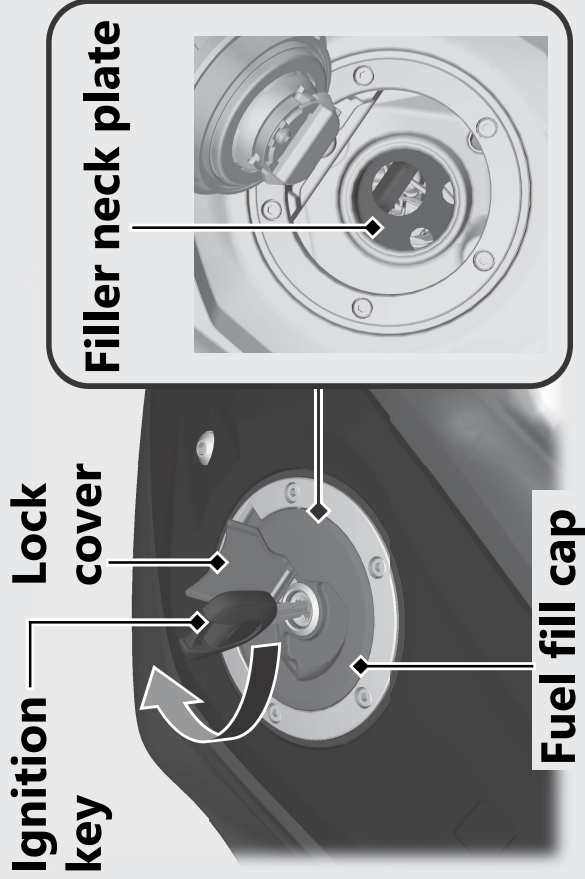

## Opening the Fuel Fill Cap

Open the lock cover, insert the ignition key, and turn it clockwise to open the fuel fill cap.

## Closing the Fuel Fill Cap

- 1 After refuelling, push the fuel fill cap closed until it locks.
- 2 Remove the ignition key and close the lock cover.

► The ignition key cannot be removed if the fuel fill cap is not locked.

Do not fill with fuel above the filler neck plate.

**Fuel type:** Unleaded petrol only

**Fuel octane number:** Your motorcycle is designed to use Research Octane Number (RON) 91 or higher.

**Tank capacity:** 10.1 L (2.67 US gal, 2.22 Imp gal)

**Refuelling and Fuel Guidelines** **P.11**

## **!WARNING**

Petrol is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine, and keep heat, sparks, and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.