

Maintenance Schedule

Items	Pre-ride Check ➡ P. 52	Frequency *1												Annual Check	Regular Replace	Refer to page
		x 1,000 km	1	6	12	18	24	30	36							
		x 1,000 mi	0.6	4	8	12	16	20	24							
Fuel Line					I		I						I			-
Fuel Level		I														-
Throttle Operation		I			I		I						I			93
Air Cleaner *2						R							R			63
Crankcase Breather *3				C	C	C	C	C	C	C	C	C	C	C		94
Spark Plug																-
Valve Clearance																-
Engine Oil		I			R		R						R			76
Engine Oil Filter			R													78
Engine Idle Speed																-
Radiator Coolant *4		I			I		I						I			80
Cooling System																-
Secondary Air Supply System																-
Evaporative Emission Control System																-

Maintenance Level

: Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled.

: Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

I : Inspect (clean, adjust, lubricate, or replace, if necessary)

C : Clean

R : Replace

L : Lubricate