

Gauges, Indicators & Displays


Overheating Message:

When the coolant temperature reaches 251°F (122°C), the numbers in the temperature display start flashing. At the same time, the high coolant temperature indicator (2) and the warning indicator (3) light.

If this occurs, stop the engine and check the reverse tank coolant level. Read pages 125 – 128 and do not ride the motorcycle until the problem has been corrected.

NOTICE

Continuing to ride with an overheated engine can cause serious engine damage.

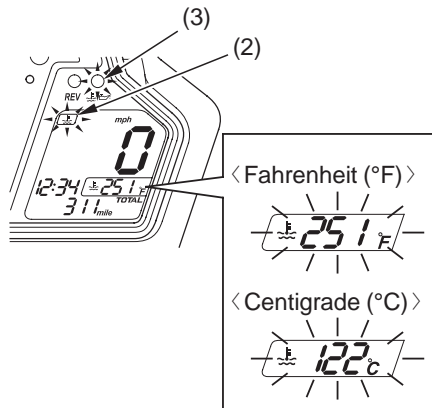

- (2) high coolant temperature indicator
(3) warning indicator