


## Engine Oil & Filter

- Pour the drained oil into a suitable container and dispose of it in an approved manner (page 188).

### NOTICE

*Improper disposal of drained fluids is harmful to the environment.*

- Apply a thin coat of engine oil to the rubber seal (6) of a new oil filter.

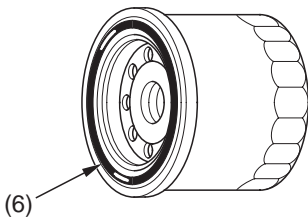

(6) rubber seal

- Install the new oil filter and tighten it by hand.
- Using an oil filter wrench attachment and a torque wrench, tighten the new oil filter to the specified torque:  
19 lbf·ft (26 N·m , 2.7 kgf·m)

(cont'd)