

■ Removal

Make sure the ignition switch is OFF.

1. Remove the front seat. ➤P.55
2. Unhook the rubber strap.
3. Disconnect the negative ⊖ terminal and remove the battery lead.
4. Disconnect the positive ⊕ terminal and remove the battery lead.
5. Remove the battery taking care not to drop the terminal nuts.

■ Installation

Install the parts in the reverse order of removal. Always connect the positive ⊕ terminal first. Make sure that bolts and nuts are tight.

For proper handling of the battery, see “Maintenance Fundamentals.” ➤P.45

Battery Goes Dead ➤P.97