

Engine Oil ► Changing Engine Oil & Filter

9. Apply a thin coat of engine oil to the rubber seal of a new oil filter.
10. Install a new oil filter and tighten.

Torque: 19 lbf·ft (26 N·m, 2.7 kgf·m).

11. Replace the sealing washer. Install the drain bolt and tighten.

Torque: 22 lbf·ft (30 N·m, 3.1 kgf·m).

12. Fill the crankcase with the recommended oil (►P. 48) and install the oil fill cap.

Required oil

When changing oil & engine oil filter:

3.2 US qt (3.0 liters)

When changing oil only:

3.0 US qt (2.8 liters)

13. Check the oil level. ►P. 60
14. Check that there are no oil leaks.
15. Install the right middle fairing with screw.
16. Install the lower fairing.