

Parts Location

Rear brake fluid reservoir ➔ P.76

Fuse box ➔ P.111

Battery ➔ P.68

Main fuse ➔ P.112

Front brake fluid reservoir
➔ P.76

Front brake lever ➔ P.87

Throttle grip ➔ P.86

Engine oil fill cap ➔ P.70

Engine oil dipstick ➔ P.70

Front suspension spring
preload adjuster ➔ P.88

Engine oil filter ➔ P.72

Engine oil drain bolt ➔ P.72

Coolant reserve
tank ➔ P.74

Lower fairing ➔ P.67

