













Maintenance Schedule

Items		Frequency*1								Refer to page	
		x 1,000 mi	0.6	4	8	12	16	20	24		
		x 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4		
Emission-related Items	Fuel Line				I		I		I	-	
	Throttle Operation				I		I		I	86	
	Air Cleaner*2					I			I	-	
	Spark Plug		Every 16,000 mi (25,600 km): I Every 32,000 mi (51,200 km): R								-
	Valve Clearance						I			-	
	Engine Oil		Initial = 600 mi (1,000 km) or 1 month: R Regular = Every 8,000 mi (12,800 km) or 12 months: R								70
	Engine Oil Filter			R		R		R		R	72
	Engine Idle Speed			I	I	I	I	I	I	I	-
	Radiator Coolant*4				I		I		R	74	
	Cooling System				I		I		I	-	
	Secondary Air Supply System				I		I		I	-	
	Evaporative Emission Control System*3					I			I	-	
Exhaust Gas Control Actuator Cable		Every 16,000 mi (25,600 km): I								-	

Maintenance Level

 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (➔ P. 131).

 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

I : Inspect (clean, adjust, lubricate, or replace, if necessary)
R : Replace L : Lubricate