Items		Frequency*1									
		× 1,000 mi	0.6	4	8	12	16	20	24	Refer to	
		× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4	page	
Fuel Line	A.F.				1		1		1	-	
Throttle Operation	*				1					86	
Air Cleaner*2	*					1			1	-	
Spark Plug	A.	Every 16,000 mi (25,600 km): 🚺 Every 32,000 mi (51,200 km): 💽								-	
မြို့ Valve Clearance	×						1			-	
Valve Clearance Engine Oil Engine Oil Filter Engine Idle Speed Badiator Coolant*4		Initial = 600 mi (1,000 km) or 1 month: 🚯 Regular = Every 8,000 mi (12,800 km) or 12 months: 🚯								70	
Engine Oil Filter			ß		ß		ß		ß	72	
Engine Idle Speed	*				1					-	
Ladiator Coolant*4					1				ß	74	
Cooling System	*				1					-	
Secondary Air Supply System	*				1				1	-	
Evaporative Emission Control System*3	*									-	
Exhaust Gas Control Actuator Cable										-	

Maintenance

50

- Maintenance Level ★: Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual
 - Procedures a (⇒ P. 131).

: Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

- I : Inspect (clean, adjust, lubricate, or replace, if necessary)
- R : Replace III : Lubricate