


## Compression Damping

You can adjust the compression damping by the COM adjuster to suit the load or the road surface.

Turn clockwise to increase compression damping (hard), or turn counterclockwise to decrease compression damping (soft). The standard position is 5 1/2 turns from the maximum setting.

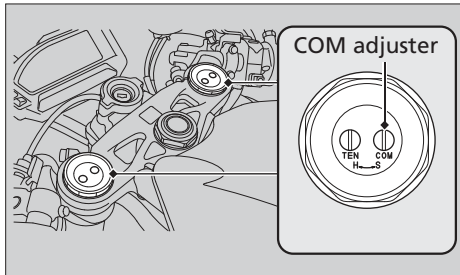

### NOTICE

Do not turn the adjuster beyond its limits.

Adjust both left and right forks to the same spring preload, rebound damping and compression damping.