


## Blown Fuse


Before handling fuses, see “Inspecting and Replacing Fuses.” [► P. 57](#)

### Fuse Box Fuses

#### (CBR1000RR)

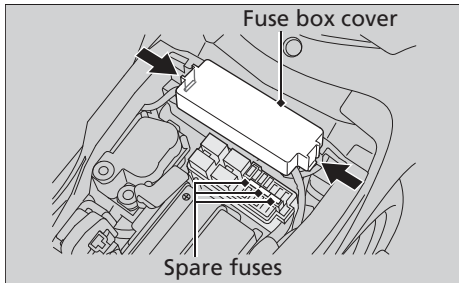

#### (CBR1000RR ABS)

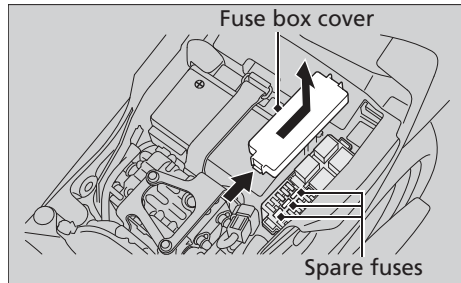

1. Remove the front seat. [► P. 65](#)
2. Remove the fuse box cover.
3. Pull the fuses out one by one check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
4. Reinstall the fuse box cover.
5. Reinstall the front seat.