













Items		Frequency*1							Refer to page	
		× 1,000 mi	0.6	4	8	12	16	20		24
		× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0		38.4
Emission-related items	Fuel Line				I		I		I	-
	Throttle Operation				I		I		I	93
	Air Cleaner*2					I			I	-
	Spark Plug		Every 16,000 mi (25,600 km): I Every 32,000 mi (51,200 km): R							-
	Valve Clearance						I			-
	Engine Oil		Initial = 600 mi (1,000 km) or 1 month: R Regular = Every 8,000 mi (12,800 km) or 12 months: R							76
	Engine Oil Filter		R		R		R		R	78
	Engine Idle Speed		I	I	I	I	I	I	I	-
	Radiator Coolant*4				I		I		R	80
	Cooling System				I		I		I	-
	Secondary Air Supply System				I		I		I	-
	Evaporative Emission Control System*3					I			I	-
	Exhaust Gas Control Actuator Cable		Every 16,000 mi (25,600 km): I							-

**Maintenance Level**

 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (P. 145).

 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

**Maintenance Legend**

I : Inspect (clean, adjust, lubricate, or replace, if necessary)  
R : Replace    L : Lubricate