
Single Seat Cowl

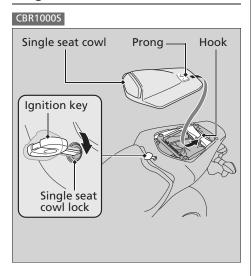

Removal

- **1.** Insert the ignition key into the single seat cowl lock.
- **2.** Turn it clockwise, then pull the single seat cowl forward and up.

Installation

- **1.** Insert the prong into the hook.
- **2.** Push down on the front of the single seat cowl.

Make sure that the single seat cowl is locked securely in position to pull it up lightly.

The single seat cowl locks automatically when closed.

Take care not to lock your key in the compartment under the single seat cowl.