


Lower Fairing

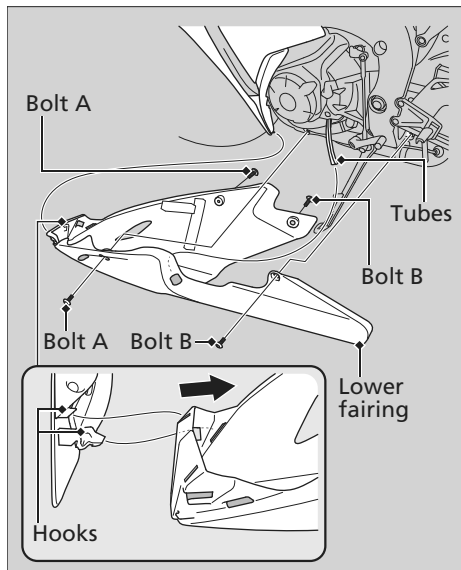

The lower fairing must be removed to change the oil filter.

Removal

1. Remove the bolts A and bolts B.
2. Remove the lower fairing carefully release the guides from hooks of the middle fairing side as shown in the illustration.

Installation

Install the parts in the reverse order of removal.

Route the tubes through the opening of the lower fairing.