


Main Fuse & FI Fuse

1. Remove the front seat. ▶ P. 70
2. **CBR1000RR/S**
Remove the starter magnetic switch cover.
3. **CBR1000RA**
Open the main and FI fuse box cover.
4. Pull the main fuse and FI fuse out one by one and check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
 - ▶ Spare fuses are provided in the fuse box. ▶ P. 123
5. Reinstall parts in the reverse order of removal.

CBR1000RR/S

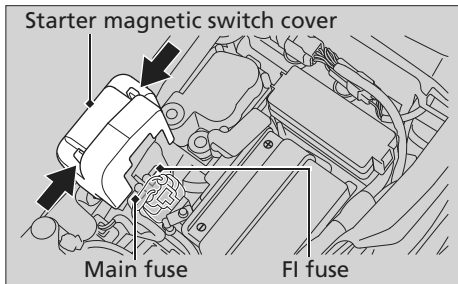

CBR1000RA

