













| Items | | | Frequency*1 | | | | | | | Refer to page | |
|------------------------|---------------------------------------|---|---|-----|-----|------|------|------|------|---------------|------|
| | | | × 1,000 mi | 0.6 | 4 | 8 | 12 | 16 | 20 | | 24 |
| | | | × 1,000 km | 1.0 | 6.4 | 12.8 | 19.2 | 25.6 | 32.0 | | 38.4 |
| Emission-Related Items | Fuel Line |  | | | | I | | I | | I | - |
| | Throttle Operation |  | | | | I | | I | | I | 93 |
| | Air Cleaner*2 |  | | | | | I | | | I | - |
| | Spark Plug |  | Every 16,000 mi (25,600 km): I Every 32,000 mi (51,200 km): R | | | | | | | - | |
| | Valve Clearance |  | | | | | | I | | | - |
| | Engine Oil | | Initial = 600 mi (1,000 km) or 1 month: R Regular = Every 8,000 mi (12,800 km) or 12 months: R | | | | | | | 76 | |
| | Engine Oil Filter | | R | | R | | R | | R | | 78 |
| | Engine Idle Speed |  | I | I | I | I | I | I | I | | - |
| | Radiator Coolant*4 | | | | I | | I | | R | | 80 |
| | Cooling System |  | | | I | | I | | I | | - |
| | Secondary Air Supply System |  | | | I | | I | | I | | - |
| | Evaporative Emission Control System*3 |  | | | | | I | | I | | - |
| | Exhaust Gas Control Actuator Cable |  | Every 16,000 mi (25,600 km): I | | | | | | | - | |

Maintenance Level

 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (2 P. 145).

 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

I : Inspect (clean, adjust, lubricate, or replace, if necessary)
R : Replace **L** : Lubricate