Instruments (Continued) **DOWN**

You can select "ON" (activate) or "OFF" (deactivate) for downshifting with the Quick Shifter.

- 1 Select the "DOWN" using the SEL ▲ (up) or SEL ▼ (down) button, and press the MODE button.
 - Press and hold the SEL ▲ (up) or SEL (down) button to move the menu quickly.



2 Select "ON" (activate) or "OFF" (deactivate) using the SEL ▲ (up) or SEL ▼ (down) button.



3 Press the MODE button. The "DOWN" setting is set, and then the display returns to the upper level hierarchy.