


Speed and mileage unit [SPEED]

- 1 Select the “mph” or “km/h” using the **[SEL]** **▲** (up) or **[SEL]** **▼** (down) button.
- 2 Press the **[MODE]** button. The speed and mileage unit setting is set, and then the display returns to the upper level hierarchy.

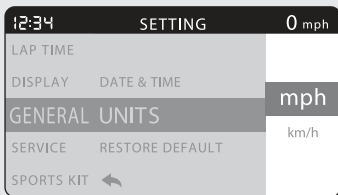

When selecting the “mph”

- Units of the speedometer and average speed show “mph”.
- Units of the odometer, tripmeter A/B and available riding distance show “mile”.
- Units of the current fuel mileage and average fuel mileage show “MPG” or “mile/L”.
- Units of the tripmeter A fuel consumption and amount of remaining fuel show “GAL” or “L”.