


## Under Cowl

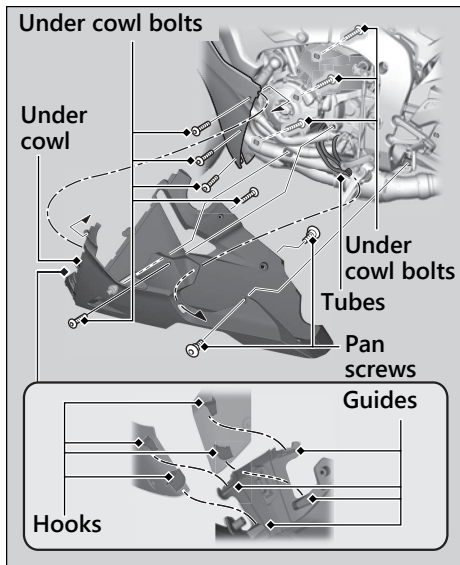

### Removal

1. Remove the pan screws and under cowl bolts.
2. Remove the under cowl carefully by releasing the guides from the hooks of the middle cowl side as shown in the illustration.

### Installation

1. Install the under cowl using reverse of the removal procedure.
2. Route the tubes through the opening of the lower cowl.
3. Install and tighten the under cowl bolts securely.
4. Install and tighten the pan screws securely.