

Instruments *(Continued)*

Elapsed time [ELAPSED]

Displays operating time since the engine was started.

Display range: 00:00 to 99:59 (hours:minutes)

- Above 99:59: returns to 00:00.

When the ignition switch is turned to the OFF position, the elapsed time is reset.

A black rectangular display showing the word "ELAPSED" in white capital letters above the time "01:30" in white.

When "--:--" is displayed, go to your dealer for service.

Available riding distance [RANGE] (Only reserve fuel mode)

When the low fuel indicator lights and the low fuel pop-up information appears, the estimated available riding distance is indicated.

Display range: 99 to 0 mile (km)

- Above 99 mile (km): "99" is displayed.
- Below 0.2 GAL (1.0 L): "--" is displayed.

The indicated available riding distance is calculated based on the riding states, and the indicated figure may not always be the actual allowable distance.

A black rectangular display showing the word "RANGE" in white capital letters above the number "20" in white, with the word "mile" in a smaller white font to the right of "20".

When "--" is displayed except for the above-mentioned cases, go to your dealer for service.