

Riding mode

You can change the riding mode.
The riding mode consists of the following parameters.

P: Engine output level

T: Torque control level

W: Wheelie control level

EB: Engine brake level

CBR1000S1

S: Suspension mode

When “-” is displayed, go to your dealer for service.

Current riding mode

