


## Battery

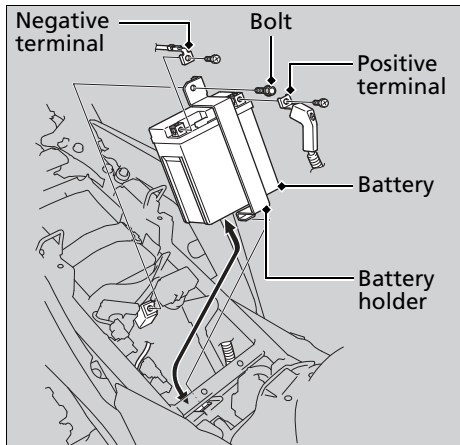

### Removal

Make sure the ignition switch is off.

1. Remove the front seat. [▶ P. 50](#)

2. Remove the battery holder by removing the bolt.
3. Disconnect the negative  $\ominus$  terminal lead from the battery.
4. Disconnect the positive  $\oplus$  terminal lead from the battery.
5. Remove the battery taking care not to drop the terminal nuts.

### Installation

Install the parts in the reverse order of removal. Always connect the positive  $\oplus$  terminal first. Make sure that bolts and nuts are tight.

The clock will be reset AM1:00 if the battery is disconnected.

For proper handling of the battery, see "Maintenance Fundamentals." [▶ P. 39](#)  
 Battery Goes Dead [▶ P. 86](#)