



Position Light

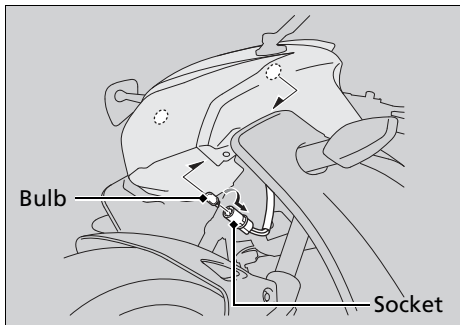

The right and left position light bulbs replacement can be done in the same way.

1. Turn the socket counterclockwise and remove it.
2. Pull out the bulb without turning.
3. Install a new bulb in the reverse order of removal.

Brake/Tail Light

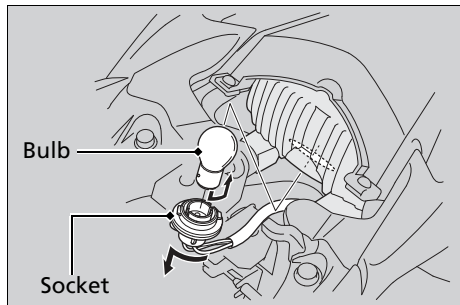

1. Remove the rear seat. [► P. 49](#)
2. Turn the socket counterclockwise, and remove it.
3. Slightly press the bulb in and turn it counterclockwise.
4. Install a new bulb and parts in the reverse order of removal.
5. Install the rear seat.