

# Troubleshooting

<b>Engine Will Not Start</b> .....	P. 76	<b>Other Warning Indications</b> .....	P. 79
<b>Overheating (Segment H flashes in coolant temperature gauge)</b> .....	P. 77	Fuel Gauge Failure Indication.....	P. 79
<b>Warning Indicators on or Flashing</b> .....	P. 78	Coolant temperature Gauge Failure Indication .....	P. 79
PGM-FI (Programmed Fuel Injection)		<b>Tire Puncture</b> .....	P. 80
Malfunction Indicator Lamp (MIL).....	P. 78	<b>Electrical Trouble</b> .....	P. 86
ABS (Anti-lock Brake System) Indicator (CBR250RA only).....	P. 78	Battery Goes Dead .....	P. 86
		Burned-out Light Bulb .....	P. 86
		Blown Fuse.....	P. 90