


2 Backlight brightness adjustment:

You can adjust the brightness to one of five levels.

- 1 Press **SEL** button. The brightness is switched.

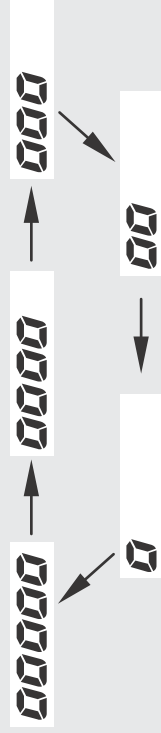

- 2 Press **SET** button. The backlight is set, and then the display moves to the activate/deactivate of tripmeter A, average fuel mileage and fuel consumption automatic reset mode.

3 To activate/deactivate of tripmeter A, average fuel mileage and fuel consumption automatic reset mode:

You can also activate or deactivate the automatic reset mode by refuelling after 1st (E) segment of the fuel gauge starts flashing. Deactivation is initially set.

- 1 Press **SEL** button to select "On" (activate) or "OFF" (deactivate) in the automatic reset mode.
- 2 To end the selection, press **SET** button. The activate/deactivate of automatic reset mode is set, and then the display moves to the ordinary display.