


- 7 Press **SET** button. The blinking RPM of all riding modes are set, and then the display moves to the setting of lighting interval RPM. At the same time, the blinking bar segment shows the currently applied setting originated from the blinking RPM and the numerical tachometer display shows the interval RPM.

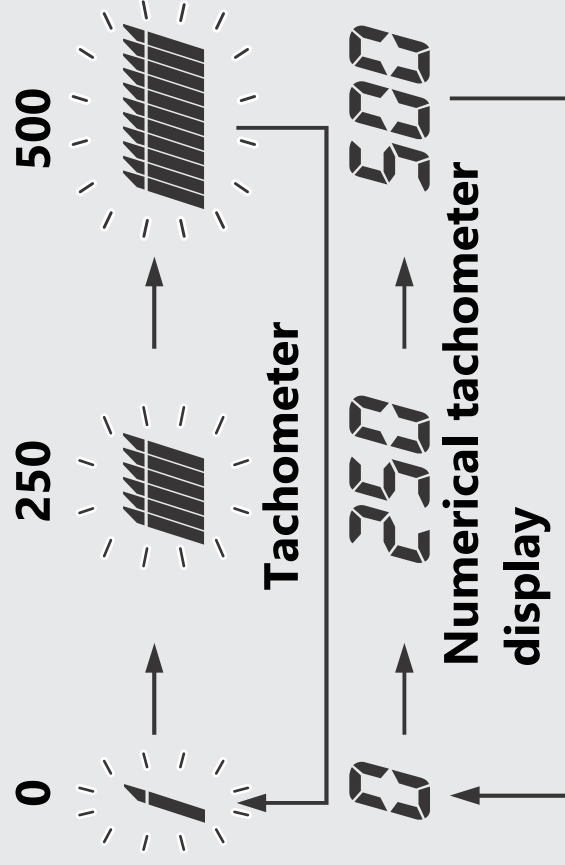

- 8 Each time **SEL** button is pressed, the number of lighting interval RPM is switched among 0 r/min (rpm), 250 r/min (rpm) and 500 r/min (rpm) in this order. During this setting, the REV indicators light one by one from left and when all indicators light, they go out, and then they start to light from left again.