


Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.

REV indicators

↗ P.35

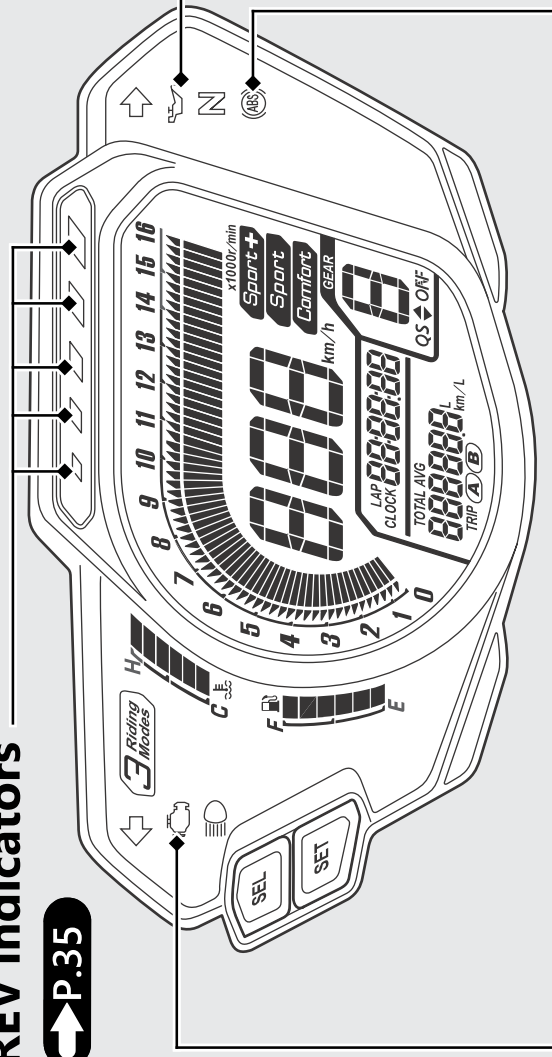

Low oil pressure indicator

Comes on when the ignition switch is turned to the ON position. Goes off when the engine starts.

If it comes on while engine is running: ↗ P.85

ABS (Anti-lock Brake System) indicator

Comes on when the ignition switch is turned to the ON position. Goes off when your speed reaches approximately 10 km/h (6 mph).

If it comes on while riding: ↗ P.86

PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)

Comes on briefly when the ignition switch is turned to the ON position.

If it comes on while engine is running:

↗ P.85