


## Shifting Gears (Continued)

### Change the Setting of Quick Shifter

You can change the setting of the Quick Shifter.

- **QS** **ON** : Quick Shifter is "ON" (activate) with upshifting and downshifting.
- **QS** **ON** : Quick Shifter is "ON" (activate) only downshifting.
- **QS** **ON** : Quick Shifter is "ON" (activate) only upshifting.
- **QS** **OFF**: Quick Shifter is "OFF" (deactivate) with upshifting and downshifting.

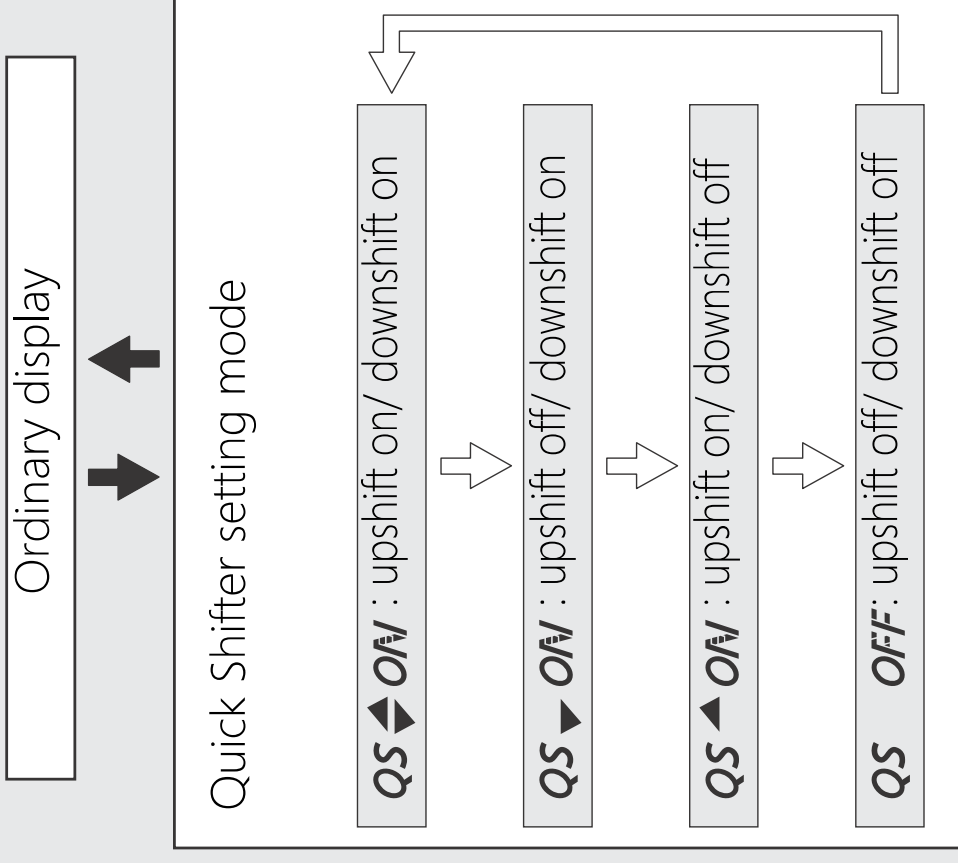

Press the **MODE** button

Press and hold the **MODE** button