
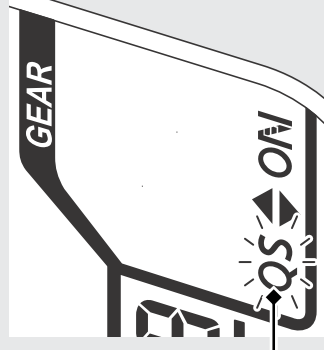


### Selecting the Quick Shifter mode

- 1 Turn the ignition switch to the ON position.
- 2 Press and hold the **MODE** button until the Quick Shifter indicator is flashing.

**MODE** button

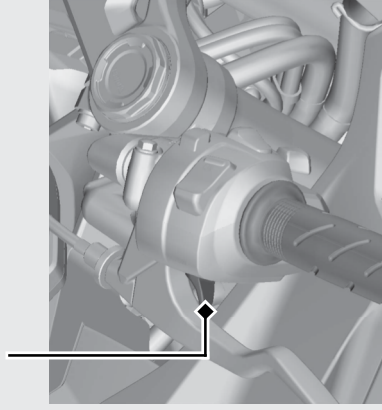

**Quick Shifter indicator**

- 3 Press the **MODE** button until the desired setting is selected.

- 4 To end the setting, press and hold the **MODE** button.

The setting can also be set by turning the ignition switch to the OFF position.

The control is automatically switched from the Quick Shifter setting mode to the ordinary display if the vehicle is started. Even in this case, established setting is maintained.