

Troubleshooting

Engine Will Not Start	P. 83
Overheating (Segment H flashes in coolant temperature gauge)	P. 84
Warning Indicators On or Flashing	P. 85
Low Oil Pressure Indicator	P. 85
PGM-FI (Programmed Fuel Injection) Malfunction Indicator Lamp (MIL)	P. 85
ABS (Anti-lock Brake System) Indicator	P. 86
Other Warning Indicators	P. 87
Fuel Gauge Failure Indication	P. 87
Coolant Temperature Gauge Failure Indication	P. 88
Tyre Puncture	P. 89
Electrical Trouble	P. 90
Battery Goes Dead	P. 90
Burned-out Light Bulb.....	P. 90
Blown Fuse	P. 91