

Clip


The clip must be removed to remove the middle fairing.

Removal

1. Press down on the center pin to release the lock.
2. Pull the clip out of the hole.



Installation


1. Push the bottom of the center pin.
- 
2. Insert the clip into the hole.
 3. Press down on the center pin to lock the clip.

Harness Band Clip

The harness band clip must be removed to remove the middle fairing.

Removal

Pull the harness band clip while pressing both side of the anchor.

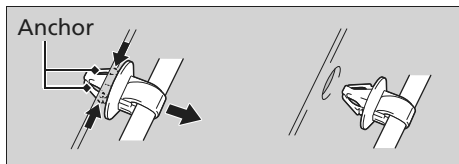

Installation

Install the harness band clip until it seats properly.