

| Items                  |  | Frequency *1 |   |     |      |      |      |      |      | Refer to page |    |
|------------------------|--|--------------|---|-----|------|------|------|------|------|---------------|----|
|                        |  | × 1,000 mi   | 0.6   | 4   | 8    | 12   | 16   | 20   | 24   |               |    |
|                        |  | × 1,000 km   | 1.0   | 6.4 | 12.8 | 19.2 | 25.6 | 32.0 | 38.4 |               |    |
| Emission-Related Items | Fuel Line                              | ⚡            |   |     | I    |      | I    |      | I    | –             |    |
|                        | Throttle Operation                     | ⚡            |   |     | I    |      | I    |      | I    | 80            |    |
|                        | Air Cleaner *2                         |              |   |     |      | R    |      |      | R    | 51, 66        |    |
|                        | Crankcase Breather *3                  |              |   | C   | C    | C    | C    | C    | C    | 81            |    |
|                        | Spark Plug                             |              | Every 16,000 mi (25,600 km): I<br>Every 32,000 mi (51,200 km): R                                  |     |      |      |      |      |      |               | 59 |
|                        | Valve Clearance                        | ⚡            |   |     |      |      | I    |      |      | –             |    |
|                        | Engine Oil                             |              | Initial = 600 mi (1,000 km) or 1 month: R<br>Regular = Every 8,000 mi (12,800 km) or 12 months: R |     |      |      |      |      |      |               | 64 |
|                        | Engine Oil Filter                      |              | R   |     | R    |      | R    |      | R    | 64            |    |
|                        | Engine Idle Speed                      | ⚡            | I   | I   | I    | I    | I    | I    | I    | –             |    |
|                        | Radiator Coolant *5                    |              |   |     | I    |      | I    |      | R    | 67            |    |
|                        | Cooling System                         | ⚡            |   |     | I    |      | I    |      | I    | –             |    |
|                        | Secondary Air Supply System            | ⚡            |   |     | I    |      | I    |      | I    | –             |    |
|                        | Evaporative Emission Control System *4 | ⚡            |   |     |      |      | I    |      | I    | –             |    |

### Maintenance Level

⚡ : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (▶ P. 121).

⚡ : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

### Maintenance Legend

I : Inspect (clean, adjust, lubricate, or replace, if necessary)  
 C : Clean  
 L : Lubricate  
 R : Replace