
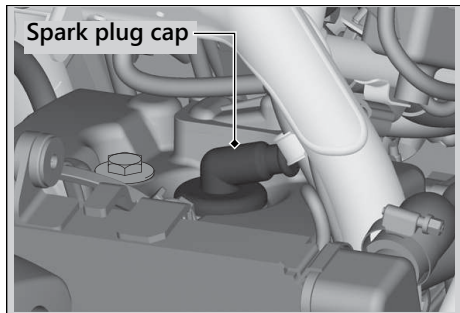


## Spark Plug ► Checking Spark Plug

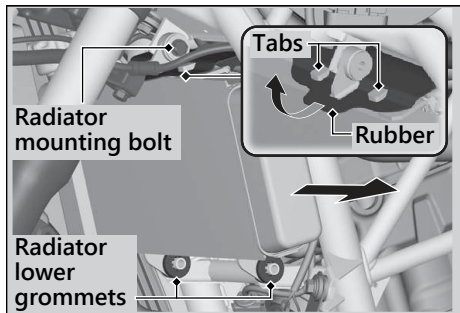

1. Remove the left middle cowl. ► P. 55
2. Remove the radiator mounting bolt.
3. Unhook the rubber from the radiator tabs.
4. Release the radiator lower grommets from the frame boss by moving the radiator to the left.
5. Disconnect the spark plug cap from the spark plug.
6. Clean any dirt from around the spark plug base.
7. Remove the spark plug using a suitable spark plug wrench.