

## Ignition Switch

Switches the electrical system on/off,  
locks the steering.

- ▶ Key can be removed when in the OFF or LOCK position.

