


**Speedometer****Coolant temperature gauge (  )**

When the coolant is over specified temperature, the segment H flashes.

**If it comes on while riding:**  **P.87**

**Fuel gauge**

Remaining fuel when only 1st (E) segment starts flashing:  
approximately 0.82 US gal (3.1 L)

**If the fuel gauge indicator flashes in a repeat pattern or turns off:**  **P.89**

**Display Check**

When the ignition switch is turned to the ON position, all the mode and digital segments will show.

If any part of these displays does not come on when it should, have your dealer check for problems.