


Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” ► P. 50

Fuse Box Fuses

1. Remove the front seat. ► P. 60
2. Remove the fuse box covers.
3. Pull the fuses out with the fuse puller in the tool kit one by one check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
4. Install the fuse box covers.
5. Install the front seat.

CBR500R

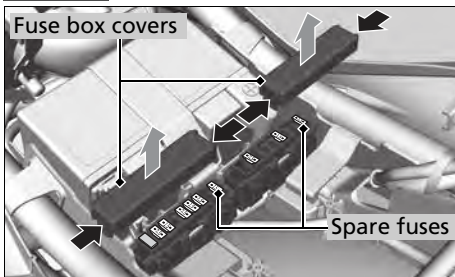

CBR500RA

