
Switches

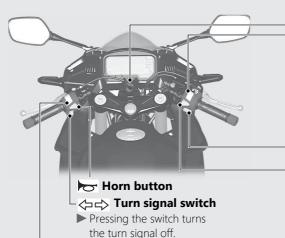

Headlight dimmer switch

- **■** : High beam
- **■**D: Low beam

- Engine stop switch

Should normally remain in the

- (Run) position.
- ▶ In an emergency, switch to the 🂢 (Stop) position (the starter motor will not operate) to stop the engine.

Start button

Switchable when the ignition switch is in the ON position.