


Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence. ➔ P. 51
- Check that there is gasoline in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
 - ▶ If the indicator lamp is on, contact your dealer as soon as possible.

Starter Motor Does Not Operate

Check the following items:

- Check the correct engine starting sequence. ➔ P. 51
- Make sure engine stop switch is in the  (Run) position. ➔ P. 48
- Check for a blown fuse. ➔ P. 125
- Check for a loose battery connection (➔ P. 78) or battery terminal corrosion (➔ P. 67).
- Check the condition of the battery.
 - ➔ P. 122

If the problem continues, have your motorcycle inspected by your dealer.