

Changing Air Cleaner Element


Use a new Honda Genuine air cleaner element or an equivalent specified for your vehicle.

NOTICE

Using the wrong air cleaner element may cause premature engine wear or performance problems.

1. Remove the front seat. ➤ P. 80
2. Remove the battery. ➤ P. 78
3. Remove the junction connector by removing the screw A.

Junction connector

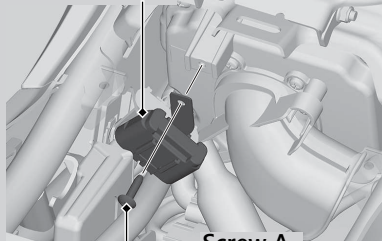

Screw A