
## **Instruments**

## **SEL button**

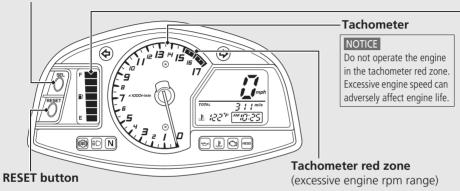

## **RESET button**

Press RESET button to change the speed and mileage units ("mph" & "mile" / "km/h" & "km") for the speedometer, odometer, and tripmeter with the display in the tripmeter A.

## (USA only)

Press RESET button to change the coolant temperature unit ("oF" / "oC") for the coolant temperature gauge with the display in the tripmeter B.